

## Патроны

	<b>Рекомендованный патрон с балансировочным подшипником</b>				
	<b>T118.984.R</b>	HSK 63F	78	60	RH/LH
	<b>Для обрабатывающих центров BIESE, HOMAG, IMA, FELDER, SCM, MASTERWOOD и тд.</b>				
	<b>OZ 25</b> <i>(Арт. T124)</i>				
	<b>T118.976.R</b>	HSK 63F	75	50	RH
	<b>T118.976.L</b>	HSK 63F	75	50	LH
	<b>T118.980.R</b>	HSK 63F	75	63	RH
<b>T118.980.L</b>	HSK 63F	75	63	LH	
	<b>Для обрабатывающих центров Biesse (Rover)</b>				
	<b>T118.800.R</b>	ISO 30	51	50	RH
	<b>T118.800.L</b>	ISO 30	51	50	LH
	<b>T118.830.R</b>	ISO 30	60	60	RH
	<b>T118.830.L</b>	ISO 30	60	60	LH

## Цанги

<b>ER 16</b> 	<b>T127.020.N</b>	ø3-2	ø17	ø28
	<b>T127.040.N</b>	ø4-3	ø17	ø28
	<b>T127.050.N</b>	ø5-4	ø17	ø28
	<b>T127.060.N</b>	ø6-5	ø17	ø28
	<b>T127.070.N</b>	ø7-6	ø17	ø28
	<b>T127.090.N</b>	ø8-7	ø17	ø28
	<b>T127.100.N</b>	ø9-8	ø17	ø28
<b>ER 25</b> 	<b>T125.040.N</b>	ø4-3	ø26	ø34
	<b>T125.050.N</b>	ø5-4	ø26	ø34
	<b>T125.060.N</b>	ø6-5	ø26	ø34
	<b>T125.070.N</b>	ø7-6	ø26	ø34
	<b>T125.080.N</b>	ø8-7	ø26	ø34
	<b>T125.100.N</b>	ø9-8	ø26	ø34
	<b>T125.120.N</b>	ø10-9	ø26	ø34
<b>T125.130.N</b>	ø11-10	ø26	ø34	
<b>ER 32</b> 	<b>T119.040.N</b>	ø4-3	ø33	ø40
	<b>T119.050.N</b>	ø5-4	ø33	ø40
	<b>T119.060.N</b>	ø6-5	ø33	ø40
	<b>T119.080.N</b>	ø8-7	ø33	ø40
	<b>T119.100.N</b>	ø10-9	ø33	ø40
	<b>T119.120.N</b>	ø12-11	ø33	ø40
	<b>T119.160.N</b>	ø16-15	ø33	ø40
<b>T119.200.N</b>	ø20-19	ø33	ø40	
<b>ER40</b> 	<b>T123.060.N</b>	ø6-5	ø41	ø46
	<b>T123.080.N</b>	ø8-7	ø41	ø46
	<b>T123.100.N</b>	ø10-9	ø41	ø46
	<b>T123.120.N</b>	ø12-11	ø41	ø46
	<b>T123.160.N</b>	ø16-15	ø41	ø46
	<b>T123.200.N</b>	ø20-19	ø41	ø46
<b>OZ25</b> 	<b>T124.050.N</b>	ø5-4,5	ø35	ø52
	<b>T124.060.N</b>	ø6-5,5	ø35	ø52
	<b>T124.080.N</b>	ø8-7,5	ø35	ø52
	<b>T124.100.N</b>	ø10-9,5	ø35	ø52
	<b>T124.120.N</b>	ø12-11,5	ø35	ø52
	<b>T124.160.N</b>	ø16-15,5	ø35	ø52
	<b>T124.200.N</b>	ø20-19,5	ø35	ø52
<b>T124.250.N</b>	ø25-24,5	ø35	ø52	